

Please be sure to put a washer between The bottom of the leg / threaded insert and the nut. Install your caster as shown in the figure above. It is important to have the washer as shown in order to distribute force evenly across the leg bottom and around the threaded insert.



Please be sure to put a washer between The bottom of the leg / threaded insert and the nut. Install your caster as shown in the figure above. It is important to have the washer as shown in order to distribute force evenly across the leg bottom and around the threaded insert.



Please be sure to put a washer between The bottom of the leg / threaded insert and the nut. Install your caster as shown in the figure above. It is important to have the washer as shown in order to distribute force evenly across the leg bottom and around the threaded insert.



Please be sure to put a washer between The bottom of the leg / threaded insert and the nut. Install your caster as shown in the figure above. It is important to have the washer as shown in order to distribute force evenly across the leg bottom and around the threaded insert.