




BREWING TECHNOLOGIES

WELDLESS FITTINGS

QUICK REFERENCE FOR Ss BREW KETTLES

1. Locate the weldless plug assembly – this fits up into the top hole on the kettle (that is optionally used for a thermometer).
2. Follow the assembly steps in the pics below and don't forget to use some Teflon tape for best sealing! Make sure the o-ring is fitted on to the threaded part of the coupling and seats up into the recess. The o-ring goes on the outside of kettle and the white washer goes on the inside.

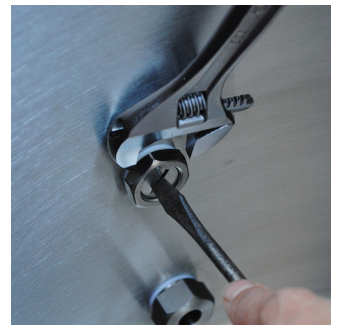

3. Now locate the related hardware for the 3 piece ball valve and trub dam assembly.
4. Follow the assembly steps in the pics below and don't forget to use some Teflon tape for best results. The o-ring goes on the outside of the kettle and the white washer goes on the inside. Please also be sure to leak test your kettle prior to brewing!!



REMINDER / CLEAN YOUR PARTS BEFORE FIRST TIME USE

Please clean your fittings / valves in a hot TSP/water solution prior to use. TSP is easy to find at your local hardware store in the cleaning supplies section. If you don't have TSP available, just use a good detergent. Then soak your parts in a solution of Starsan for a few minutes while you are doing setup and you are good to go! Enjoy your new Ss Brew Kettle and HAPPY BREWING!